



# Photosmart compact photo printer comparison chart



	HP Photosmart A536	HP Photosmart A636	HP Photosmart A826
Price	<b>\$99.99</b> Average retail price (price may vary)	<b>\$149.99</b> Average retail price (price may vary)	<b>\$199.99</b> Average retail price (price may vary)
Key step-up features	<ul style="list-style-type: none"> <li>Print fast —get a 4 x 6" snapshot in as little as 27 seconds**</li> </ul>	HP Photosmart A536 features plus: <ul style="list-style-type: none"> <li>Offers a variety of creative effects</li> <li>Larger 3.5-inch LCD screen</li> </ul>	HP Photosmart A636 features plus: <ul style="list-style-type: none"> <li>Larger 5.6-inch LCD screen</li> </ul>
Ink	Vivera tri-color inkjet print cartridge	Vivera tri-color inkjet print cartridge	Vivera tri-color inkjet print cartridge
Printable photo sizes (borderless)	Up to 4" x 6" to 4" x 12" including panorama and 5" x 7"	Up to 4" x 6" to 4" x 12" including panorama and 5" x 7"	Up to 4" x 6" to 4" x 12" including panorama and 5" x 7"
Speed per photo	As fast as 27 seconds**	As fast as 27 seconds**	As fast as 39 seconds**
Resolution (dpi=dots per inch)	N/A	Up to 4800 x 1200 dpi	Up to 4800 x 1200 dpi
Adaptive lighting*	N/A	Yes	Yes
Red-eye removal*	N/A	Yes	Yes
Built-in decorative photo borders/frames	N/A	40 frames (11 seasons, 6 kids, 17 daily life, 6 special events)	80 frames (36 seasons, 14 kids, 18 daily life, 12 special events)
Built-in photo clip art*	N/A	41 seasons, 40 kids, 38 daily life, 33 special events, 14 greetings	29 seasons, 28 kids, 20 daily life, 16 special events
Built-in albums*	N/A	6 seasons, 7 kids, 8 daily life, 8 special events	6 seasons, 7 kids, 10 daily life, 8 special events
Captions*	N/A	5 fonts, 20 colors	5 fonts, 6 colors
CD/DVD labels*	N/A	No	Yes
Passport photos*	N/A	Yes	Yes
Color effects	N/A	Black and white, black and white tints, color tints, sepia, and antique	Black and white, sepia, and antique
Photo fix*	Yes	Yes	Yes
Type of memory cards supported	Memory Stick Memory Stick PRO Secure Digital/MultiMediaCard xD-Picture Card	CompactFlash Magic Gate Memory Stick Memory Stick PRO Secure Digital/MultiMediaCard xD-Picture Card	CompactFlash Magic Gate Memory Stick Memory Stick Duo (with adapter) Secure Digital/MultiMediaCard xD-Picture Card Mini SD (with adapter)
Print directly from camera	Yes	Yes	Yes
Print from camera phones	Optional with HP bt450 Bluetooth Wireless Printer and PC Adapter	Optional with HP bt450 Bluetooth Wireless Printer and PC Adapter	Optional with HP bt450 Bluetooth Wireless Printer and PC Adapter
Photo Software included	No	Yes	Yes
Paper tray type	20-sheet input tray	20-sheet input tray	100-sheet input tray
Display	2.4-in LCD (color graphics)	4.8" touchscreen, 3.5" viewing area	7" touchscreen, 5.6" viewing area
Ways to connect to a PC	USB	USB	USB
Internal battery	N/A	Rechargeable lithium ion (optional)	N/A
Dimensions	9.92" x 4.61" x 5.28"	9.92" x 4.61" x 5.28"	10.4" x 15.12" x 14.65"
Warranty	One year	One year	One year

**\* Definitions**

Adaptive lighting technology: Balances relationships between bright and dark areas in a photo, preserving gentle contrasts by smoothing out harsh contrasts.

Red-eye removal: Finds red eye in your photos and removes it with the press of a button.

Built-in photo clip art: Choose from a variety of clipart categories to give any photo an artistic feel. Select your clipart right in the printer and print - its that simple!

Built-in albums: Easily put photos in album layouts that are already created.

Captions: Using stylus you can create captions for your photos.

CD/DVD labels: Can be used to dress up gift discs and those commemorating special events, or to simply spice up a CD/DVD collection.

Passport photos: For vacations, business trips or just visiting relatives, you can select the perfect photo to put on your passport. Each printer sheet contains as many copies of a photo as will fit on a page, depending on the passport size selected.

Photo fix: Automatically enhances your photos: fixes red eye, sharpens blurred photos, and improves dark areas of photos without affecting the light areas. Photo fix is turned on by default, indicated by the green light on the printer, and can be turned on or off by pushing the Photo Fix button

\*\* When printing from a memory card, after first page.